

KODAK Film Camera

MOTORIZED S88




User Manual

ENG

S88 Motorized Camera

USER MANUAL

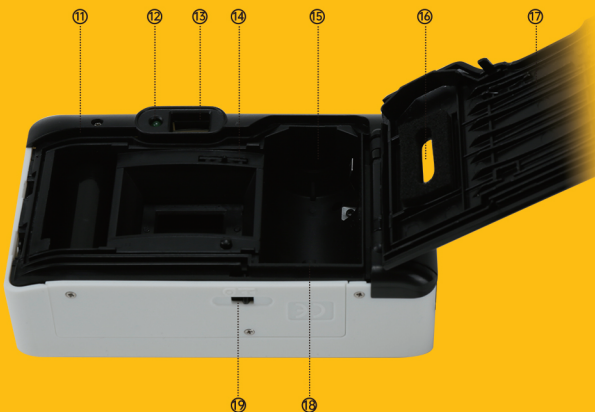

1. Shutter Release Button
2. Frame Counter
3. Red Eye Reduction Lamp
4. Viewfinder
5. Electronic Flash
6. Lens Cover Switch / Flash Switch
7. Lens
8. Back Cover Latch
9. Wrist Strap Eyelet
10. Battery Chamber Cover
11. Film Take-up Spool
12. Flash Ready Light
13. Viewfinder Eyepiece
14. Film Sprocket
15. Film Chamber
16. Film Check Window
17. Back Cover
18. Rewind Shaft
19. Rewind Switch

Loading Battery

Open the Battery Chamber Cover located at the side of the camera Insert one 1.5V AA size alkaline battery. (Make sure the direction is correct)

Close the battery chamber cover. Remove the battery if it is not to be use for an extended period. This will reduce the possibility of battery leakage.

Loading the Film

- Slide the lens cover switch to open the lens cover and turn on the camera.
- Open the back cover by sliding the back cover latch upwards.
- Insert the film cartridge into the film chamber.
- Pull the film leader out until it aligns with the Film Take-up Spool's hook.(Make sure the film is lying flat.)
- Check that the sprocket wheel teeth engage the film perforation, and then close the back cover.
- Press the shutter button a few times to advance the film until the number "1" appears in the film counter.
- You can confirm if there is film in your camera or not by looking at the film check window.



Holding your Camera

Always use both hands to keep your camera steady. Take pictures with sunlight behind you.

When holding the camera vertically, always position it with the flash at the top.

Be careful not to place your fingers over the Lens Flash Lamp or Viewfinder

Taking Pictures

- Open the lens cover and compose the picture. Make sure your subject is at least 5 ft. (1.5m) from the camera
- The film will automatically wind to the next frame when the shutter button is released.
- When you have finished taking photos. close the lens cover to save battery power.

Focusing

The lens is fixed in focus previously. No need to worry about focusing, but no closer than 5 ft.(1.5m)

Built-in Flash

Fill Flash(⚡)It is advisable to select the fill-flash if the main subject is standing in shade on a sunny day, the flash will illuminate the shadow areas of your subject. Push the lens cover switch to the Fill position (⚡)and wait for the ready light to come on before taking the photograph.

Red-Eye Reduction

"Red-Eye" is caused when the flash is reflected from the retina of the eye.It occurs mostly in low light condition .To ensure that your subjects always look their best, your camera is equipped with a red-eye reduction system. The red-eye reduction light glows whenever the green "flash ready light" is on.

Unloading the Film

When the film is finished, the film advance will not start again. Slide the rewind switch to the rewind position and the film will automatically rewind. After the film is fully rewind, the motor will stop, and "s" will be seen in the Frame Counter Window. Open the back cover and unload the film.



Proper Care of Your Camera



The temperature range in which the camera functions properly is between 40°C and -10°C (104 F and 14°C). Take care not to expose the camera to sudden changes in temperature. This may cause moisture to condense on the inside of the camera. Always protect it from dirt, rain dampness or excessive heat. Keep your camera safe from sudden vibration. Do not place the camera near equipment that has strong magnetic field such as television or radio. Avoid touching the lens. To clean the lens, wipe it clean with photographic lens cleaning tissue or a cotton cloth. Avoid using alcohol or other chemical solvents on the camera body.

Product Specification:

Film Format :135 Film (24x36mm)

ISO 200/400/800

Optical Lens :31mm, F=10,1 element

Focusing : Focus Free, 1m - ∞

Shutter Speed :1 /125s

Film Transport : Motorized load, advance and rewind

View Finder : Field = 70%

Power source : 1AA - Alkaline Battery

Flash : Built-in Flash, Slide Switch

15s recycle time(120uf.)

Red Eye Reduction System: Minimized Red-Eye in Flash LED Sliding

Lens Cover :

Act as shutter lock to shut off power & prevent accidental picture taking

Dimensions :110(W)x 62(H)x 38(D) mm

Weight:123 gram

Main Plastic Material : ABS

Film and battery not included

Address : 10/F Chun Wo Commercial Centre, 23-29 Wing Wo Street, Central, Hong Kong

URL: <https://kodak.meta-is.com/kodaklicensingproducts-films88.html>

The Kodak trademark, logo and trade dress are used under license from Kodak.

Copyright ©2023 Meta Imaging Solutions Limited